

	50UT	HCC		SOUTHCO NO. 02 MAGNETIC CATCH ADHESIVE MOUNTING				DATE 10-15-75	DRAWN RHB	CHKD		SCALE NTS	J-02		BER -121-	10	
REV, LET.	DATE	BY-CHKD		REVISIONS		ITEM	PART NO.	N	/ATERIA	\L	FINISH	1			R.S.	DATE	APP
Α	1-18-82	BM	PRN: S-1-01			ASSEMBLY	02-30-121-10					_			A	10-15-75	RHB
В	7-29-86	555	PRN: 02-	52		HOUSING		3003-	H14 ALUM		NATURA				В		1
С	8-7-90	340	PRN: 02-	63		POLE PIECE (2 REQD)		10	10 STE		ZINC PLATE 2Q-Z-325 TY.I				C		
D	5MAR93	TRR	PRN: S-1	-03		MAGNET		BAR	IUM FER	RITE	NATUR	AL			D	"/5/76	SJM
						RIVET		2024-	H13 ALUM	INUM	NATUR	AL			<u> </u>		
								<u> </u>				-			<u> </u>		<u> Т.</u>

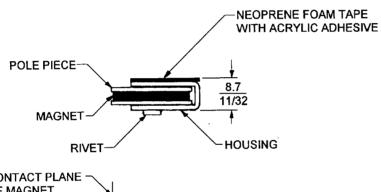

TO INSTALL REMOVE PROTECTIVE PAPER AND APPLY ASSEMBLY TO A CLEAN, DRY SURFACE

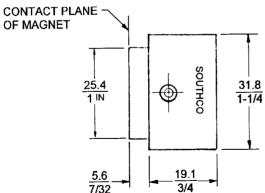

NOTES: MAGNETIC CATCHES IN GENERAL AND ADHESIVE MOUNTING ASSEMBLIES IN PARTICULAR ARE DESIGNED TO FUNCTION UNDER INTERMITTENT BREAK AWAY LOADS. DO NOT SUBJECT ADHESIVE MOUNTING ASSEMBLIES TO A CONTINUOUS LOAD.

DOOR AND FRAME SHOULD HAVE A BUILT-IN STOP TO PREVENT EXCESSIVE LOADING OF THE ADHESIVE DUE TO SLAMMING OF THE DOOR.

MILLIMETER / INCH

MILLIMETER INCH